


Printed in England

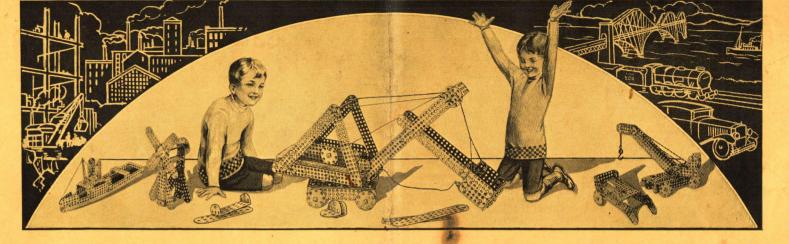

MECCANO

X SERIES OUTFIT No. 2

The first step in constructing the models shown in this folder is

to build the framework, afterwards tightening up the nuts and bolts. bolt, so that the Strips, etc., are only held together loosely.

Where Screwed Rods are used in addition to Double Angle The greatest fun of all is to set your models to work by means Strips for spacing Strips apart, the latter should be secured first to ensure correct placing of the Rods. Any moving parts, such as wheel axles, etc., should next be fitted in position, and in arranging these care should be taken to leave a little play at the ends of the Rods to allow free movement.

The Discs are held on the Rods by a nut screwed up tightly

of the Meccano X Clockwork Motor. By adding more outfits you may build still larger and finer

Pivoted joints are made by locking two nuts together on one

models and increase the interest of your hobby to an

Meccano X parts may be used in conjunction with PRICE standard Meccano parts and accessories, thus opening up an entirely new field for model-building.

Copyright by MECCANO LIMITED, LIVERPOOL, throughout the World.

